



## How to Order - Check Valves

### Ordering Information

To order, add the desired Nominal Spring Size Designator after the basic ordering number. The Nominal Spring Size as well as the basic ordering number, are found in the tables on page 17.

### Part Number Configuration

